

< F1 > Help

Non-standard Hard Disk Drive

Heads	[0]
Cylinders	[0]
Precompensation			
Cyl. # or 'N'one	[0]
Head Landing Zone	[0]
Sectors Per Track	[0]

Enter the above information from
your hard drive users manual.

< ESC > Return to selection screen
<ENTER> Complete one entry

(smm/jej-05/11/94)

□