

Note: Refer to Faxback Doc. # 1578 for Main Logic Board Layout.

The following tables list possible switch and jumper settings for your computer.

Switch Settings for S1:

Switch	Function	Position
1	Parallel Port Enable	On = Enable * Off = Disable
2	Parallel Port Address	On = 378-37F hex (LPT1) * Off = 278-37F hex (LPT2)
3	Serial Port Enable	On = Enable * Off = Disable
4	Serial Port Address	On = 3F8-3FF hex (COM1) * Off = 2F8-2FF hex (COM2)
5	Extended Parallel Port (Bidirectional Mode)	On = Disable * Off = Enable
6	Diskette Drive Port Address	On = 3F0-3F7 hex (Primary) * Off = 370-377 hex (Secondary)
7	SmartDrive Port Enable	On = Enable * Off = Disable
8	SmartDrive address	On=Primary * Off=Secondary 1F0-1F7 = CS0 170-177 = CS0 3F6-3F7 = CS1 376-377 = CS1
* Indicates default setting.		

Jumper Settings:

Feature	Description	Jumper Setting
Math Coprocessor	Installed Not Installed *	E30 and E31 installed E31 and E32 installed
BIOS ROM Type	Reserved for factory use 256KB (32KBx8)	E5 and E6 installed E1 and E2 installed
Parallel Port Interrupt	IRQ5 IRQ7 *	E19 and E20 installed E20 and E21 installed
Serial Port Interrupt	IRQ3 (COM2) IRQ4 (COM1) *	E16 and E18 installed E14 and E16 installed
Video Mode	Monochrome Color *	E8 and E9 installed E7 and E8 installed
Video	Enabled	E26 and E27 installed

Interrupt	Disabled *	E25 and E26 installed
On-Board Video Enable	Disabled Enabled *	E34 and E35 installed E33 and E34 installed
* Indicates factory setting.		