

Replacement Battery CS-0204 from National Parts
3 Volt Lithium, coin type battery


The battery powers the CMOS RAM and the system clock, enabling them to maintain the system setup and the correct time and date when the computer power is off.

The battery should last at least three years with normal use. When the battery fails, the computer will not retain time and date or configuration information correctly. You can obtain a replacement battery from your computer dealer.

If the computer does not restart when you turn it on or reset it, the battery might be weak or dead. Before replacing the battery, refer to Main Logic Board Layout to locate the battery socket.

To replace the battery:

1. Gently lift the battery clip and remove the old battery from the socket on the main logic board.

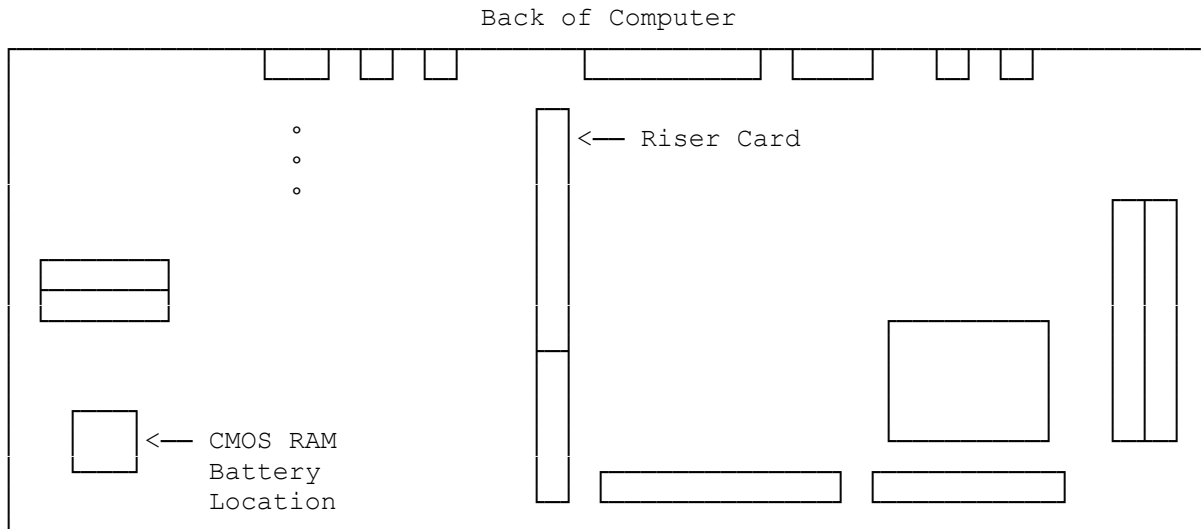

2. Insert the new battery, positive (+) side up.
3. Run the setup utility to enter the time and date.

WARNING: There is danger of an explosion if the battery is replaced incorrectly. Replace the battery only with the same type or an equivalent type recommended by the manufacturer's instructions. Do not dispose of a battery in a fire. Keep batteries away from children.