

Using the CD-ROM Drive

To insert a CD into the drive, push the CD tray in the release it. Then, carefully pull the CD tray from the front of the drive. Hold the CD by its edges and place it into the CD tray. Slide the CD tray into the drive until it remains fully closed. Refer to the "Utilities" section for information about the programs that let you play CDs and adjust audio.

CD-ROM Drive Activity Indicator

The activity indicator on the front panel of the CD-ROM drive functions as described in the following table:

Indicator Color	Explanation
Flashing yellow	A CD is in the drive; the drive is initializing.
Yellow	The volume control has been adjusted; the drive is seeking.
Green	The drive is initialized and ready to access a CD.
Flashing green	The drive is transferring data from a CD or audio is playing.
Flashing red	The drive is running internal diagnostics (after power up).
Red	A drive error has been detected. Check all cable connections and driver software. Call your computer dealer to request technical assistance.
No color	No data is being transferred from CD, no CD is in the drive, or the system is turned off.

(smc-02/02/94)