

Parallel Port Programming

The parallel port can be programmed at LPT1 or LPT2:

PORT SELECT	PORT ADDRESS	INTERRUPTS
LPT1-IRQ7	3BC-3BE	IRQ7
LPT2-IRQ7	378-37A	IRQ7
LPT1-IRQ5	378-37A	IRQ5
LPT2-IRQ5	278-27A	IRQ5

(smc-11/09/93)

□