

If you have problems, here are some suggestions which might help.

PROBLEM	POSSIBLE CAUSE	REMEDY
Scanner is totally inoperative.	No power.	Check to see that you plugged the scanner into a working AC outlet.
Scanner is on but will not scan.	The SQUELCH control is not correctly adjusted.	Adjust the SQUELCH control clockwise.
In the scan mode, the scanner locks on frequencies that have an unclear transmission.	"Birdies"	Avoid programming frequencies listed in "A General Guide To Scanning," or only listen to them manually.

If none of these suggested remedies solves the problem, contact your local Radio Shack store for assistance.

(ALL-12/13/94)