



Paper Bail Lever:

Used to pull the paper bail forward. Pulling the paper bail lever forward will invoke the "automatic paper loading" function. The paper advances to the print start position.

Paper Selector:

Pull the paper selector backward to select tractor feed paper, or forward for single sheet paper.

Power Switch:

Rock the switch upward to turn ON the DMP-2104. Rock the switch downward to turn OFF the printer.

Control Panel:

Four panel switches allow the user to custom configure the default setup of the printer and control paper loading/unloading. Faxback Document # 4189 will provide specific instructions on using the control panel.

Paper Adjustment Knob:

Used to make adjustments to the print start position. Clockwise to advance the paper, counterclockwise to retract the paper.

Print Head Adjustment Lever:

Used to change the distance between the print head and platen. Forward to decrease the distance, backward to increase the distance. Faxback Document # 4193 will provide a more detailed use of the print head adjustment lever.