

DEC.	HEX.	SYMBOL	FUNCTION
0	00	NUL	Null
7	(07)	BEL	Buzzer
8	(08)	BS	Backspace
9	(09)	HT	Horizontal Tab
10	(0A)	LF	Line Feed
11	(0B)	VT	Vertical Tab
12	(0C)	FF	Form Feed
13	(0D)	CR	Carriage Return
14	(0E)	SO	Double Width by Line
15	(0F)	SI	Set Condensed Print
17	(11)	DC1	Select Printer
18	(12)	DC2	Cancel Condensed Print
19	(13)	DC3	Deselect printer
20	(14)	DC4	Cancel Double Width by Line
24	(18)	CAN	Clear Printer Buffer
127	(7F)	DEL	Delete Character
27 14	(1B) (0E)	ESC SO	Double Width by Line
27 15	(1B) (0F)	ESC SI	Set Condensed Print
27 32 n	(1B) (20) n	ESC SP n	Set Intercharacter Space
27 33 n	(1B) (21) n	ESC ! n	Print Mode Select
27 35	(1B) (23)	ESC #	Cancel MSB Control
27 36 n1	(1B) (24) n1	ESC \$ n1	Set Absolute Print Position

n2	n2	n2	
27	(1B)	ESC	Select Download Character Set
37	(25)	%	
n	n	n	
27	(1B)	ESC	Define Download characters
38	(26)	&	
0	0	NUL	
n1	n1	n1	
n2	n2	n2	
d0	d0	d0	
d1	d1	d1	
d2	d2	d2	
27	(1B)	ESC	Select Score
40	(28)	(
45	(2D)	--	
3	(03)	3	
0	00	NUL	
1	(01)	1	
d1	d1	d1	
d2	d2	d2	
27	(1B)	ESC	Select Graphics Mode
42	(2A)	*	
m	m	m	
n1	n1	n1	
n2	n2	n2	
27	(1B)	ESC	Set n/360" Line Spacing
43	(2B)	+	
n	n	n	
27	(1B)	ESC	Select Underline
45	(2D)	---	
n	n	n	
27	(1B)	ESC	Vertical Tab Channel
47	(2F)	/	
n	n	n	
27	(1B)	ESC	Set 1/8" Line Spacing
48	(30)	0	
27	(1B)	ESC	Set 1/6" Line Spacing
50	(32)	2	
27	(1B)	ESC	Set Graphics Line Spacing
51	(33)	3	
n	n	n	
27	(1B)	ESC	Select Italic
52	(34)	4	
27	(1B)	ESC	Cancel Italic
53	(35)	5	

27	(1B)	ESC	Printable Code Area Expansion
54	(36)	6	
27	(1B)	ESC	Cancel Printable Code Area Expansion
55	(37)	7	
27	(1B)	ESC	Copy ROM to RAM
58	(3A)	:	
0	(00)	NUL	
0	(00)	NUL	
0	(00)	NUL	
27	(1B)	ESC	Move To Home Position
60	(3C)	<	
27	(1B)	ESC	Set MSB to 0
61	(3D)	=	
27	(1B)	ESC	Set MSB to 1
62	(3E)	>	
27	(1B)	ESC	Reassign Graphics Mode
63	(3F)	?	
s	s	s	
m	m	m	
27	(1B)	ESC	Initialize Printer
64	(40)	@	
27	(1B)	ESC	Set Text Line Spacing
65	(41)	A	
n	n	n	
27	(1B)	ESC	Set Vertical Tab Stops
66	(42)	B	
n1	n1	n1	
n1	n1	n1	
..	
0	(00)	NUL	
27	(1B)	ESC	Set Page Length in lines
67	(43)	C	
n	n	n	
27	(1B)	ESC	Set Page Length in inches
67	(43)	C	
0	(00)	NUL	
n	n	n	
27	(1B)	ESC	Set Horizontal Tab Stops
68	(44)	D	
n1	n1	n1	
..	
0	(00)	NUL	
27	(1B)	ESC	Set Emphasized

69	(45)	E	
27	(1B)	ESC	Cancel Emphasized
70	(46)	F	
27	(1B)	ESC	Set Double-Strike
71	(47)	G	
27	(1B)	ESC	Cancel Double-Strike
72	(48)	H	
27	(1B)	ESC	Perform n/180" Line Spacing
74	(4A)	J	
n	n	n	
27	(1B)	ESC	Single Density Graphic
75	(48)	K	
n1	n1	n1	
n2	n2	n2	
27	(1B)	ESC	Double Density Graphic
76	(4C)	L	
n1	n1	n1	
n2	n2	n2	
27	(1B)	ESC	Select 12 cpi
77	(4D)	M	
27	(1B)	ESC	Set Skip Over Perforation
78	(4E)	N	
n	n	n	
27	(1B)	ESC	Cancel Skip Over Perforation
79	(4F)	O	
27	(1B)	ESC	Set 10 CPI
80	(50)	P	
27	(1B)	ESC	Set Right Margin
81	(51)	Q	
n	n	n	
27	(1B)	ESC	Set International Character
82	(52)	R	
n	n	n	
27	(1B)	ESC	Set Super-/Subscript
83	(53)	S	
n	n	n	
27	(1B)	ESC	Cancel Super-/Subscript
84	(54)	T	
27	(1B)	ESC	Set/Reset Unidirectional
85	(55)	U	
n	n	n	

27	(1B)	ESC	Continuous Double-width
87	(57)	W	Printing
n	n	n	
27	(1B)	ESC	High Speed Double
89	(59)	Y	Density Graphic
n1	n1	n1	
n2	n2	n2	
27	(1B)	ESC	Quadruple Density Graphic
90	(5A)	Z	
n1	n1	n1	
n2	n2	n2	
27	(1B)	ESC	Set Relative Position
92	(5c)	\	
n1	n1	n1	
n2	n2	n2	
27	(1B)	ESC	Auto Justification
97	(61)	a	
n	n	n	
27	(1B)	ESC	Set Vertical Tabs In
98	(62)	b	Channel
m	m	m	
n1	n1	n1	
n2	n2	n2	
...	
nk	nk	nk	
0	(00)	NUL	
27	(1B)	ESC	Set 15 CPI
103	(67)	g	
27	(1B)	ESC	Set Reverse Line Feed
106	(6A)	j	
n	n	n	
27	(1B)	ESC	Select Typestyle
107	(6B)	k	
27	(1B)	ESC	Set Left Margin
108	(6C)	l	
n	n	n	
27	(1B)	ESC	Set Proportional Spacing
112	(70)	p	
n	n	n	
27	(1B)	ESC	Set Character Style
113	(71)	q	
n	n	n	
27	(1B)	ESC	Select Character Table
116	(74)	t	
n	n	n	

27	(1B)	ESC	Set/Reset Double Height
119	(77)	w	
n	n	n	

27	(1B)	ESC	Set LQ or Draft
120	(78)	x	
n	n	n	

□