

COMPUTER	CABLE CATALOG NUMBER
Model I (Exp.Interface)	26-1401
Model II/16/DT-1/12	26-4401
Model III/4	26-1401

Before making any connections between the Printer and TRS-80, be sure that power to all units is off!

You must also be sure you have the correct cable for the TRS-80 if the LMP-2150 is to operate properly. The following table describes the printer cables the Radio Shack provides.

1. Attach the molded male end of the interface cable to the connector at the left rear of the Printer. It is important that you do not force the plug. If it doesn't fit one way, turn it over and try again.
2. Connect the other end of the cable to the printer jack of your computer. See your TRS-80 owner's manual for specific instructions.

□