

## Indicator Summary Chart

Indicator	Status	Indicates that the TAD-412 is"
POWER	Steady	The TAD-412 is turned on and is ready to operate.
ANSWER	Steady	The TAD-412 is ready to receive calls in the ANSWER mode.
	Slow Flash	The TAD-412 has recorded at least one new incoming message. (It is still in the ANSWER mode and ready to receive calls)
	Fast Flash	The TAD-412 is answering a call.
	Off	The TAD-412 is in the other modes than ANSWER.
MEMO	Steady	The TAD-412 is ready to record the outgoing announcement or a memo.
	Slow Flash	The TAD-412 has recorded a new memo.
	Fast Flash	The TAD-412 is rewinding the outgoing tape to the beginning in ANN. RECORD mode.
ANSWER and MEMO	ANSWER-Slow Flash MEMO-Fast Flash	The incoming tape has come to the end during recording an incoming message.
	Both Slow Flash	The TAD-412 has recorded both a new incoming message and a new memo.
	Continuous Three Fast Flashes	* The outgoing tape has come to The end while recording the outgoing announcement.
		* The outgoing or incoming tape is torn.
		* The microprocessor in the TAD has become "confused" by conflicting instructions.