

We do not expect to have problems with your TV, but if you do, the following chart might help. If you still have problems, contact the local Radio Shack store for assistance.

Problem	Check
No Picture	<p>Is the power cord plugged in?</p> <p>Is there a power failure?</p> <p>Is the DC power cord correctly connected?</p> <p>Is TV/VIDEO correctly selected?</p> <p>Is STD/HRC/IRC correctly selected?</p>
The Remote Control Does Not Work	<p>Check batteries inside the remote control.</p> <p>Move closer to the TV.</p> <p>Point the remote control toward the TV.</p>
Poor Reception	<p>Is the antenna or cable system properly connected?</p> <p>If using an outside antenna, check for broken or cracked wires.</p> <p>Re-position the antenna.</p> <p>Try selecting a different channel. If you can, there might be a problem with the station.</p> <p>Adjust the picture controls.</p> <p>If connected to a video device, check the TV/VIDEO setting.</p>
No Volume	<p>Is the mute feature active?</p> <p>Is the volume turned all the way down?</p> <p>If connected to an audio/video source, check the audio connections.</p>