

Many of the phone's functions are arranged in an easy-to-use menu system.

The menu system (see "List of Menu Functions") lets you view and change the current setting of any function. Each function is described in detail in the "Security Features" and "Additional Features" of this manual.

There are two ways to access the menu functions.

Menu Method:

1. Press MNU. The message USE TO VIEW prompts you to scroll through the menus.

USE TO VIEW

2. Press /\ or \/ to scroll through each menu function you want. When the display shows the function you want, press STO.

Shortcut Method:

Press MNU and enter the number of the menu function you want. For example, pressing MNU 1 1 accesses the CHANGE LOCK CODE function.

Some menu functions are restricted and you are prompted to enter either the lock code or security code supplied with the phone by your dealer (see "Security Features").

LIST OF MENU FUNCTIONS

NOTES: (L) = requires you to enter a four-digit lock code (default is 1234)

(S) = requires you to enter the five-digit security code.

See "Security Features" for more information about these codes.

Menu Name	Shortcut/ Description	Page
LOCK PHONE (L)	MNU 0 Locks/Unlocks the phone.	31
SYSTEM SELECT	MNU 1 Selects roaming mode (system feature)	36
RINGING TYPE	MNU 2 Selects the ringing tone type.	40
CALL TIMERS (S)	MNU 3 Displays the length of calls. Resets the timers.	38
LIGHTS	MNU 4	41

CONTROL	Selects operation of display and keypad lights.	
KEYPAD TONES	MNU 5 Turns keypad tones on/off.	42
RINGING VOLUME	MNU 6 Selects the volume of the ringing tone.	40
NAM SELECT	MNU 7 Displays and selects cellular number/network.	36
AUTO ANSWER	MNU 8 Sets automatic answer on/off.	43
ACCESSORY MENU	MNU 9 Controls accessories connected to the phone.	43
CLEAR LASTCALL	MNU 1 0 Sets the last-called numbers to be cleared or retained when the phone is switched off.	40
CHANGE LOCKCODE (S)	MNU 1 1 Allows you to change lock code.	30
DATA MODE	MNU 1 2 Selects data mode (in a call).	44
EMERGENCY 9 KEY (L)	MNU 1 3 Sets 9 key on/off for one-touch emergency calls.	34
CALL BARRING	MNU 1 4 Sets call restrictions.	32
MEMORY LOCK (S)	MNU 1 5 Sets memory access restrictions.	33
ACTIVATE KEYGUARD	MNU 1 6 or MNU * Locks/unlocks the keyboard.	31
SEND DTMF	MNU SEND or MNU 1 7 Sends touch tones (during a call).	42

(ALL-9/15/94)