

You can program the tuner's memory so when you press CHANNEL - or +, the VCR's tuner scans only the active channels in your area.

1. Press MENU on the remote control. The main menu appears on the TV screen.

PUSH NUMBER SHOWN
1 CLOCK SET
2 NORMAL PROGRAM
3 DAILY PROGRAM
4 WEEKLY PROGRAM
5 PROGRAM REVIEW
6 CALENDAR
7 SET UP
TO END PUSH MENU

2. Press 7. The set-up menu appears on the TV screen.

PUSH NUMBER SHOWN
1 TV SYSTEM (TV)
2 TAPE SELECT (T120)
3 RENTAL POSITION (OFF)
4 AUTO CHANNEL SET
5 COLOR MENU SELECT
6 LANGUAGE SELECT
TO END PUSH MENU

3. Press 1 to select the TV (antenna) or CATV band.

If you have cable service and the cable wire is connected directly to the VCR without a cable box, select CATV. C appears on the VCR's display.

If you have cable service and use a cable box between the cable wire and the VCR, or if you do not have cable and want to receive up to 68 VHF/UHF channels, select TV. C does not appear on the VCR's display.

TV or CATV appears on the screen.

4. Press 4. The tuner scans through and memorizes all the active channels in your area.

After scanning all the channels, the tuner automatically exits the set-up and channel set modes and stops on the lowest-numbered active channel.

AUTO CHANNEL SET PROCEEDING
CHANNEL 02

| TO END PUSH MENU |

5. Press MENU to return to the TV screen.

ADDING OR DELETING A CHANNEL

If the tuner stores a channel that you do not want or misses a weak channel you do want, follow these steps to manually add or delete the channel.

1. Turn on the TV and set it to the same channel as the VCR's CH.4/CH.3 switch.
2. Press POWER to turn on the VCR.
3. Use the remote control's number buttons to select the channel you want to add.

Press CHANNEL - or + to tune to the channel you want to delete.

4. Press ADD/ERASE to add or delete the channel. Ch flashes on the display if the channel is erased.

SELECTING A CHANNEL

To scan for a channel, set TV/CATV to the desired TV system and press CHANNEL - or +. The tuner automatically advances in the direction of the arrow to the next programmed channel.

NOTE: If you press CHANNEL + when the tuner is at the highest programmed channel, the tuner returns to the lowest programmed channel. If you press CHANNEL - when the tuner is at the lowest programmed channel, the tuner returns to the highest programmed channel.

To directly select a channel, press the remote control's number buttons for the desired channel. You must precede one-digit channel numbers with 0 (01, 02, 04, and so on). For three-digit channel numbers, press 100. Then enter the second and third digits in the channel number.

NOTE: If you enter a valid but inactive channel number, you see the blank screen until you enter an active channel number.

CABLE CHANNEL DESIGNATIONS

Your VCR can receive up to 113 cable channels. The VCR displays the channels as 1-125.

Channels 2-13 are the same for VHF and cable TV, and cable companies usually number them as they appear on the display.

However, cable companies often designate other cable channels with letters or letter-number combinations. The following chart shows common cable channel designations.

Alternate Channel	VCR Tuner	Alternate Channel	VCR Tuner
-------------------	-----------	-------------------	-----------

Designations	Display	Designations	Display
Mid Band Channels		Hyper Band Channels	
A	14	W+1	37
B	15	W+2	38
C	16	W+3	39
D	17	W+4	40
E	18	W+5	41
F	19	*	*
G	20	through	through
H	21	*	*
I	22	W+58	94
Super Band Channels		W+59	100
J	23	*	*
K	24	through	through
L	25	*	*
M	26	W+84	125
N	27	VHF Low Band Channels	
O	28	4A or A8	01
P	29	Mid Low Band Channels	
Q	30	A-5	95
R	31	A-4	96
S	32	A-3	97
T	33	A-2	98
U	34	A-1	99
V	35		
W	36		

For more information, contact your cable company. You still might have to experiment to determine the proper cable channel designations for your cable system.

(ALL-10/26/94)