

If you have problems, please check the items below. They include several common faults which you can correct yourself.

TROUBLE	CHECK POINTS
No power.	<ul style="list-style-type: none"> * Make sure the power cord is plugged in. * Make sure the television is turned on.
No picture or sound.	<ul style="list-style-type: none"> * Try another channel. * Check the setting of CABLE AIR.
Sound is OK; picture is poor.	<ul style="list-style-type: none"> * Try another channel (station trouble) * Check antenna connections. * Adjust the picture controls.
Poor reception.	<ul style="list-style-type: none"> * Adjust the antenna. * Check antenna connections. * May be local interference.
Lines in picture.	<ul style="list-style-type: none"> * Try another channel (station trouble). * Adjust the antenna. * Adjust the picture controls. * Check antenna connections. * May be local interference.
Ghosts (multiple images)	<ul style="list-style-type: none"> * Try another channel (station trouble). * Check antenna connections. * May be local interference.
Remote control doesn't work.	<ul style="list-style-type: none"> * Check batteries in the remote control.
Cannot tune desired channel.	<ul style="list-style-type: none"> * Try another channel (station trouble). * Check the setting of CABLE or AIR. * Channel may not be in channel memory.