

The fax machine has a variety of special parameters. There is no need to change most of these parameters under normal circumstances.

See the chart for the list of parameters and their explanation. Then, follow this procedure to change a setting:

	PRESS	DISPLAY
1	#	-
2	#	--
3	Enter the two-digit parameter number precede single-digit codes with a 0. Example: 0 1 for resolution default.	01 [1] 1
4	Enter desired setting Example: 2 changes the default resolution to FINE.	01 [1] 2
5	START/ENTER	--
6	STAND BY	09-20-1990 03:00P

Parameter Table

Parameter Number	Parameter	Setting Number	Setting	Standard Setting	Comment
01	RESOLUTION	1	Standard	0	Temporarily set with the front panel control.
		2	Fine		
		3	Super Fine		
02	CONTRAST	1	Normal	0	Also set with front panel control.
		2	Light		
06	HEADER PRINT	1	Inside copy area	0	Indicates where the station ID prints.
		2	Outside copy area		
		3	Not printed		
07	DIALING METHOD	1	Touch-Tone	0	
		2	Pulse		
13	XMT IN NO PAPER (Send when no paper or other error.)	1	Allowed	0	If allowed, some transactions might not be recorded.
		2	Not Allowed		

19	XMT JOURNAL	1	OFF	0	
	(Individual fax log)	2	ON		
27	CALLING TIME	1	Normal (65 sec.)	0	Might need to set to longer for overseas faxes.
	(Waiting period after dialing)	2	Long (80 sec.)		
		3	Very long (95 sec.)		
32	INITIAL OPERATOR CALL	1	OFF	0	Set this to 2 if you will share fax and voice on one line.
	(Voice contact beep)	2	ON		

(smc-03/02/94)