


When using the DMP-2100 with fan-fold paper, start printing at least 1/2" below the tops of the form (perforation) and stop printing at least 1/2" down before the bottom perforation. Other applications may require that you specify the number of lines per page via the FORMS command.

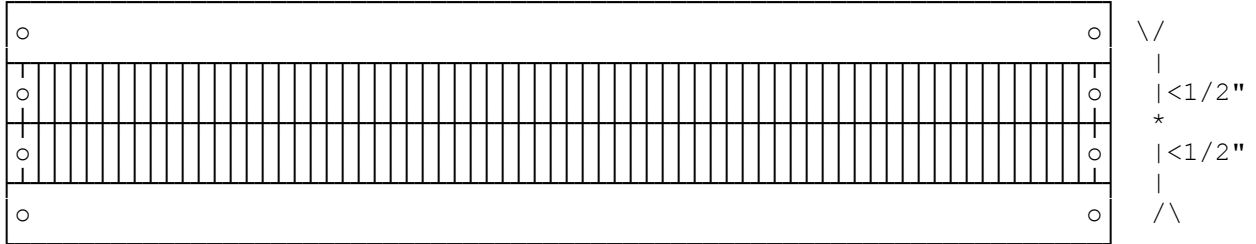

(smm 07/26/93)